


ASSEMBLING INSTRUCTION**LEGEND****CRASH PAD KIT****CM4900-25****WWW.BARRACUDAMOTO.COM**

- | | |
|--|---|
| 1. ALLEN SCREW M8X50
VITE A BRUGOLA M8X50
TORNILLO ALLEN M8X50
INBUSSCHRAUBE M8X50
VIS ALLEN M8X50 | 2. SPACER TUBE H.29
DISTANZIALE H.29
DISTANCIADOR H.29
DISTANZROHR H.29
ESPACEUR H.29 |
| 2. SPECIFIC BRACKET
STAFFA SPECIFICA
SOPORTE ESPECIFICO
SPEZIFISCHE KLAMMER
SUPPORT SPECIFIQUE | |

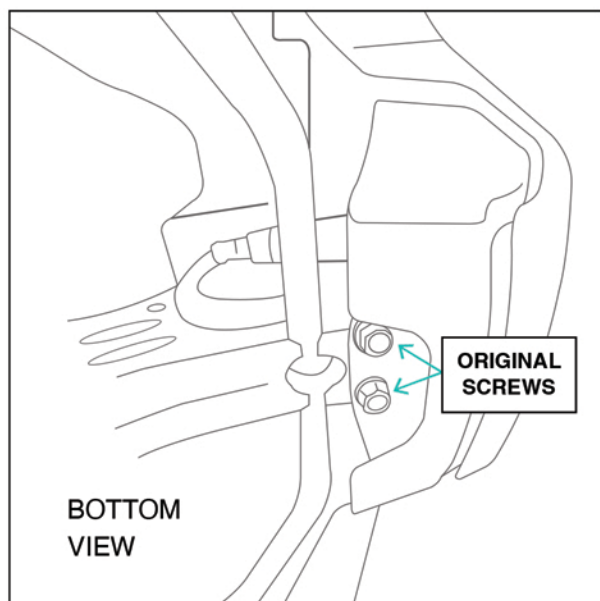

**FIRST REMOVE THE ORIGINAL SCREWS
AND THEN FIT THE SPECIFIC BRACKET
INTO THE SAME HOLES**

