

MOUNTING PROCEDURE

KIT REAR FENDER
HONDA CB1000 R

HN1 PARAFANGO

KIT

X1. BARRACUDA CHAIN COVER
X1. BARRACUDA REAR FENDER
X3. SCREW 5X12
X1. SCREW 6X20
X1. SCREW 6X30
X2. WASHER DIAMETER 6
X3. WASHER DIAMETER 5
X1. RUBBER WASHER
X1. THICKNESS H 13
X1. THICKNESS H 20

WWW.BARRACUDAMOTO.COM




REMOVE THE ORIGINAL SCREWS ALONG THE FORK

REMOVE THE ORIGINAL CHIAN COVER

INSTALL THE SPECIFIC BRACKET LIKE DESCRIBED IN THE FOLLOW PICTURES

INSTALL THE BARRACUDA CHAIN COVER AND REAR FENDER

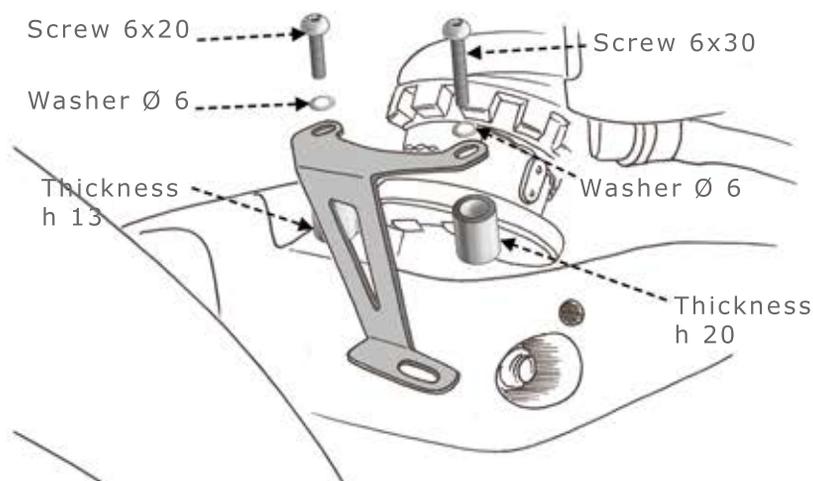

REMOVE THE ORIGINAL CHAIN COVER FROM THE MOTORBIKE AND THE TWO SCREWS FROM THE REAR SHOCK ABSORBER. USE THE TWO THICKNESS TO FIX THE BRACKET LIKE DESCRIBED IN THE PICTURE. ONCE FIXED THE BRACKET WE ADVICE TO SEPARATE THE ABS PART FROM THE ALUMINIUM CHAIN COVER SO YOU CAN FIX ON THE MOTORBIKE.

WHEN YOU POSED THE BARRACUDA CHAIN COVER UNDER THE REAR BLAKE JOIN THE CHAIN COVER TO THE ABS PART.

AT THE END, ONE YOU JOINED THE REAR FENDER, FIX ALL THE POINTS ON THE FORK: THREE ON THE CHAIN COVER (2 EXTERNAL AND 1 INTERNAL) AND ONE ON THE BRACKET ALREADY FIXED USE THE RUBBER WASHERS BETWEEN THE BRACKET AND ABS PART TO ABSORB THE VIBRATIONS. PROCEED LOCKING ALL THE SCREWS.