

ASSEMBLING INSTRUCTION

REAR FENDER


HN7 PARAF

WWW.BARRACUDAMOTO.COM

LEGEND

- | | | |
|--|--|---|
| 1. REAR FENDER
PARAFANGO POSTERIORE
GUARDABARROS TRASERO
HINTERER KOTFLÜGEL
GARDE-BOUE ARRIÈRE | 4. TEFLON WASHERS M5
RONDELLA TEFLON M5
ARANDELAS DE TEFLON M5
TEFLONSCHLEIBE M5
RONDELLE EN TÉFLON M5 | 7. NEOPRENE SQUARE LOW
QUADROTTO NEOPRENE BASSO
QUADRADO DE NEOPRENO BAJO
NEOPREN QUADRATISCH NIEDRIG
CARRÉ NÉOPRÈNE FAIBLE |
| 2. THREADED THICKNESSES
SPessore FILETTATO
ESPACIADOR ROSCADO
GEWINDE ABSTAND
ESPACEUR FILETÉ | 5. ALLEN SCREW M5X10
VITE A BRUGOLA M5X10
TORNILLO ALLEN M5X10
INBUSSCHRAUBE M5X10
VIS ALLEN M5X10 | 8. ALLEN SCREW M6X10
VITE A BRUGOLA M6X10
TORNILLO ALLEN M6X10
INBUSSCHRAUBE M6X10
VIS ALLEN M6X10 |
| 3. MOTORCYCLE BRACKET
STAFFA MOTOCICLETTA
SOPORTE DE MOTOCICLETA
MOTORRADHALTERUNG
SUPPORT DE MOTO | 6. NEOPRENE STRIPS HIGH
STRISCIA NEOPRENE ALTO
TIRAS DE NEOPRENO ALTO
NEOPRENSTREIFEN HOCH
BANDES EN NÉOPRÈNE HAUT | 9. NUT Ø6
DADO Ø6
TUERCA Ø6
MUTTER Ø6
ÉCROU Ø6 |

RIGHT SIDE

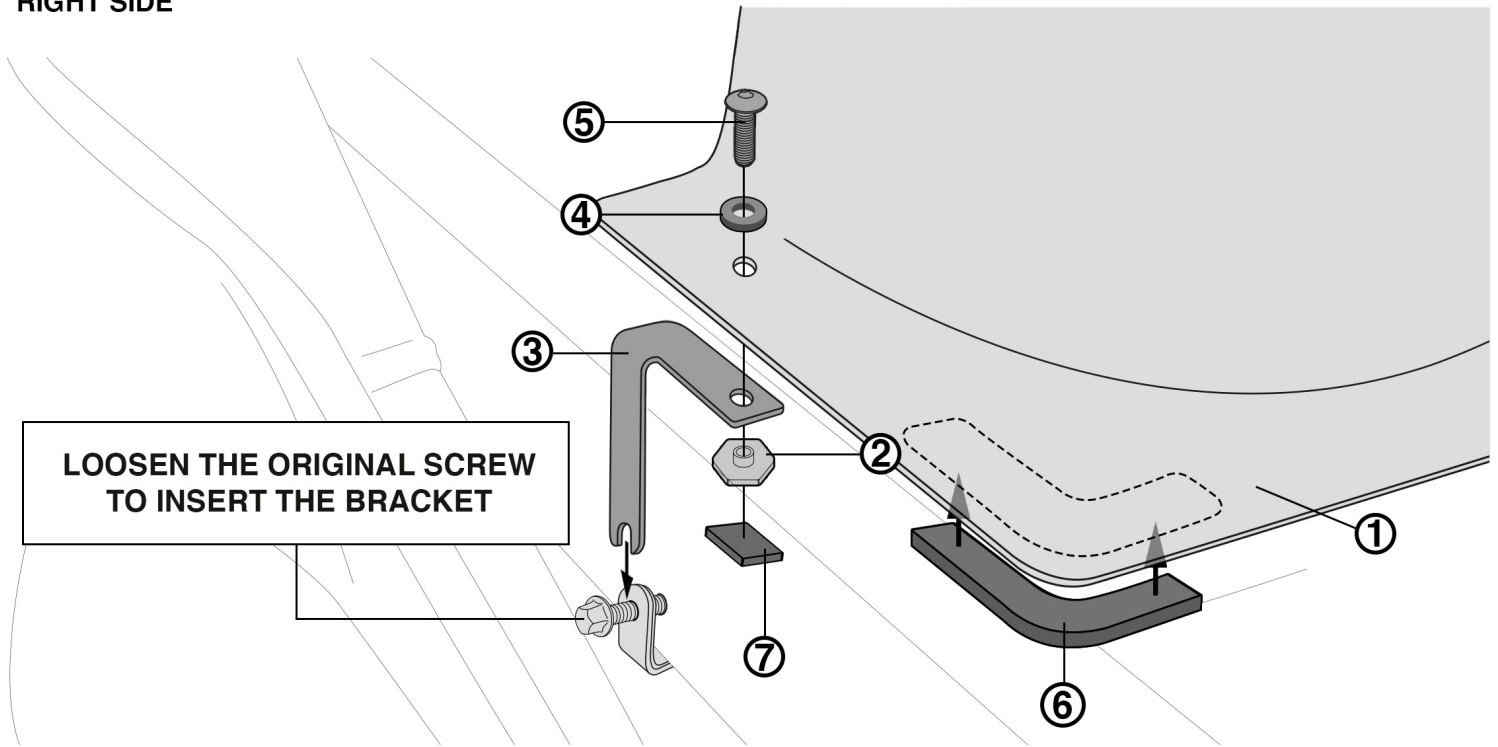

LEFT SIDE

