

MOUNTING PROCEDURE



KIT WINDSHIELD KAWASAKI ER6-N 2012

KE6300-12

WWW.BARRACUDAMOTO.COM

KIT

- SPECIFIC BRACKET "A" COUPLE
- SPECIFIC BRACKET "B" COUPLE
- X1. WINDSHIELD/SCREEN AEROSPORT
- X4. SCREW STANDARD 5X12
- X4. TEFLON WASHER
- X4. RUBBER WASHER
- X4. SPECIAL WASHER
- X4. PROTECTIVE SPONGE STICKER
- X2. BLIND NUT DIAMETER 6
- X2. LARGE WASHER DIAMETER 6
- X2. SQUARE SHAPE BOLT DIAMETER 6

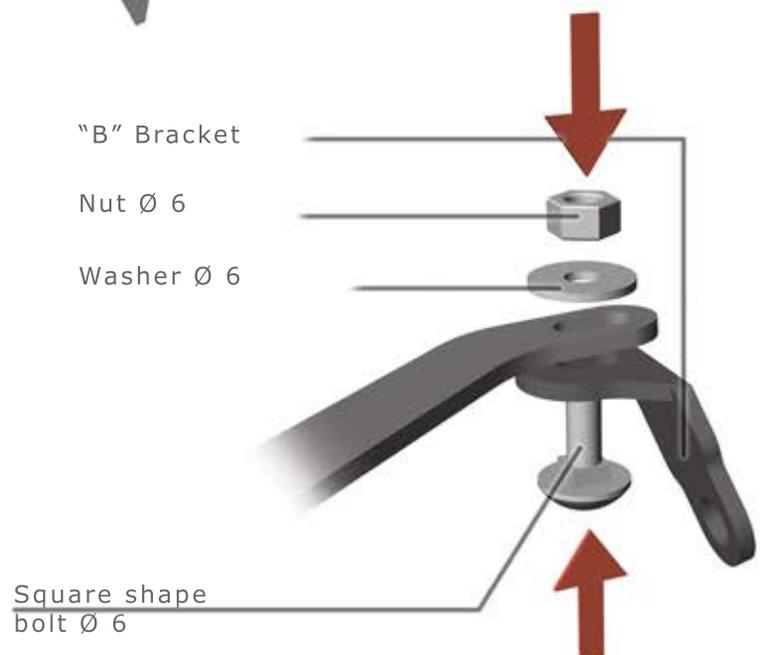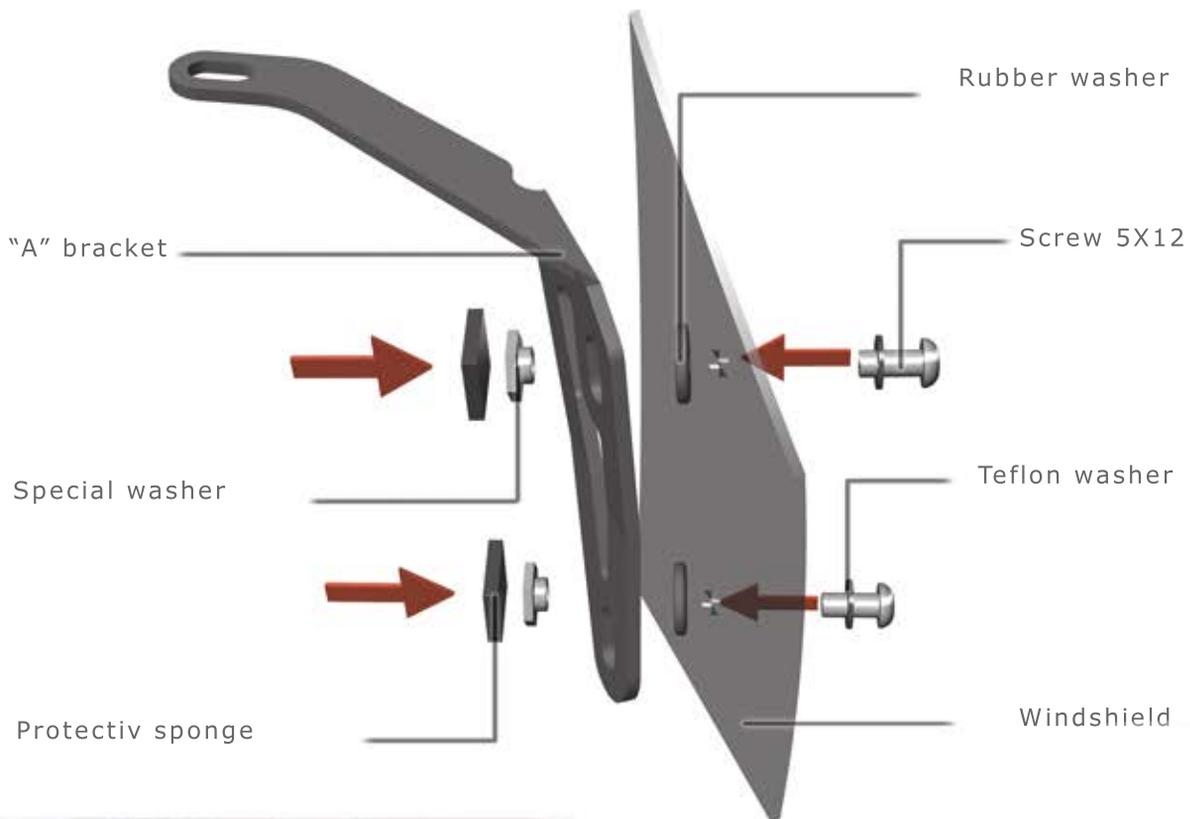

ASSEMBL THE BARRACUDA WINDSHIELD/SCREEN USING THE SCREWS AND THICKNESS INCLUDED IN THE KIT. MOUNT ALL LIKE THE INSTRUCTION, AT THE END UNLOCK THE FORK UPPER SCREWS AND SUBSTITUTE THEM WITH THE 8X50 SCREWS TOGHETER WITH THE HIGH 10 THICKNESS. WE ADVICE TO LOCK ALL TOGHETER ONCE YOU FIX THE WINDSHIELD/SCREEN TO AVOID BROKEN PART DUE TOO FORCING