


MOUNTING PROCEDURE**KIT WINDSHIELD
MV AGUSTA BRUTALE****MB7300**WWW.BARRACUDAMOTO.COM**KIT**

- X2. BRACKET
- X2. THICKNESS DIAMETER 13
- X2. "ROUND HEAD" SCREW 8X40
- X4. "ROUND HEAD" SCREW 5X16
- X4. RUBBER WASHER
- X4. WASHER DIAMETER 5
- X4. TEFLON WASHER
- X4. AUTOLOCK NUT DIAMETER 5
- X1. BARRACUDA WINDSHIELD/SCREEN

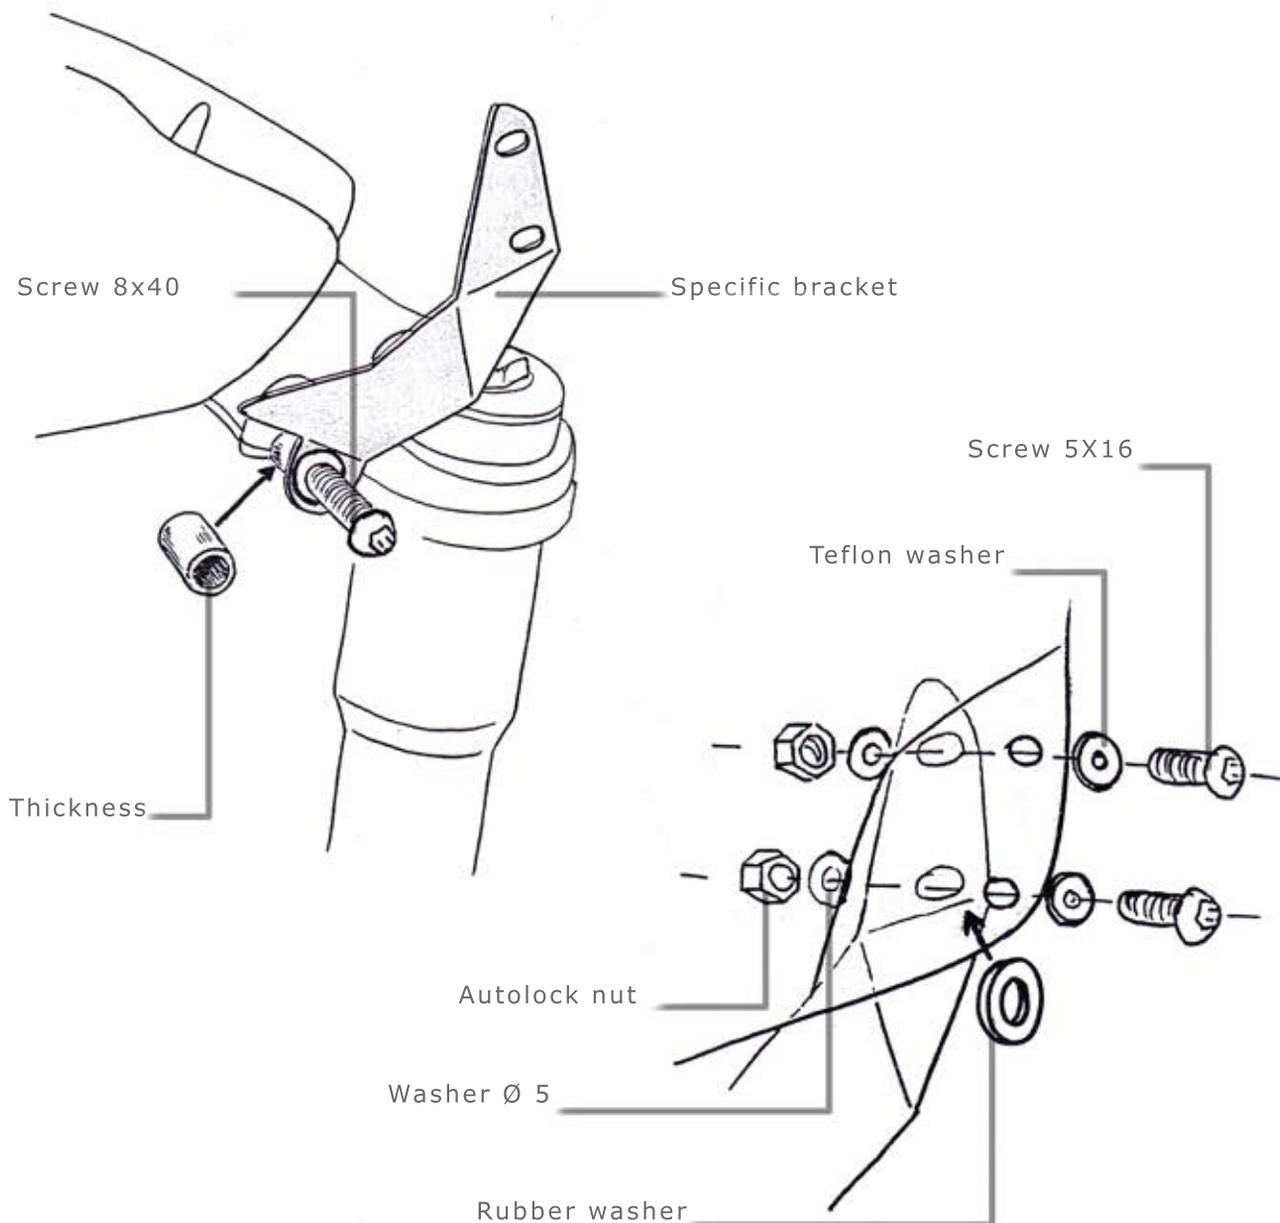

UNLOCK THE SCREW FROM THE STEERING PLATE AND INSTALL THE BRACKET, PUT THE THICKNESS BETWEEN THE BRACKET AND PLATE FIXING THEM WITH THE 8X40 SCREWS. ONCE YOU MOUNT THE BRACKET, APPROACH THE WINDSHIELD/SCREEN AND FIXING WITH THE FOUR 5X16 SCREWS USING THE RUBBER WASHERS IN THE INSIDE PART. PUT THE TEFLON WASHERS BETWEEN THE HEAD OF SCREW AND WINDSHIELD/SCREEN, FIX ALL WITH THE AUTOLOCK NUT AND WASHERS Ø 5. BEFORE LOCK ALL SLIDE THE WINDSHIELD/SCREEN HOW MUCH POSSIBLE TO THE REAR PART OF THE MOTORBIKE TO APPROACH IT TO THE STRUMENTATION.

NOTE: USE THE FOUR RUBBER WASHERS BETWEEN THE BRACKET AND THE WINDSHIELD/SCREEN