

MOUNTING PROCEDURE**KIT UNIVERSAL WINDSHIELD
AEROSPORT****N3000**WWW.BARRACUDAMOTO.COM**KIT**

X2. BRACKET
 X4. "ROUND HEAD" SCREW 6X14
 X2. "CYLINDER HEAD" SCREW 6X10
 X8. TEFLON WASHER DIAMETER 6
 X6. WASHER DIAMETER 6
 X2. AUTOLOCK NUT DIAMETER 6
 X4. BLIND NUT DIAMETER 6





VERIFY IF THE ARCUATION OF BRACKET "A" FACE TO THE OUTSIDE OR FACE THE INSIDE, IT DEPENDS FROM THE WIDTH OF HEADLIGHT.


MOUNT THE "A" BRACKET TO THE WINDSHIELD/SCREEN AND INSERT FROM THE INSIDE THE SCREWS "B" (6X14) INTO THE BRACKET HOLES, THAN IN THE TEFLON WASHERS "D", INTO THE WINDSHIELD/SCREEN HOLES, INTO THE OTHERS TEFLON WASHERS "D" AND SCREWING AT THE END THE BLIND NUTS "E" (PICTURE 1).

MOUNT FROM THE OUTSIDE THE CYLINDER HEAD SCREWS "F" (6X10), WITH THE "C" WASHERS INTO THE STRETCHED HOLES FROM THE "A" BRACKET AND SCREW WITHOUT LOCK THE AUTOLOCK NUTS "G", INSERT THE "C" WASHERS (PICTURE 2)

LOOSEN THE FIXING HEADLIGHT SCREWS, INSERT THE WINDSHIELD/SCREEN MOUNTED ON THE HEADLIGHT INSERTING THE BODY OF SCREWS HELD-HEADLIGHT INTO THE SPECIFIC HOLES OF SCREWS "A" (PICTURES 2-3). FIND THE IDEAL INCLINATION FOR THE WINDSHIELD/SCREEN, MAKING BEAT THE HEADS OF SCREWS "F" ON THE HELD-HEADLIGHT BRACKET. FIND THE IDEAL INCLINATION AND LOCK THE SCREWS "F" WITH THE NUTS "G".

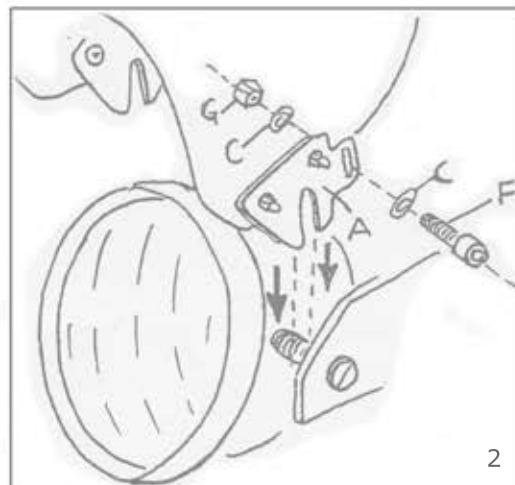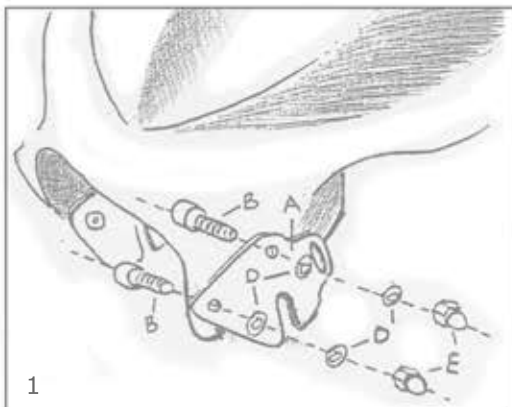

Part. Assembling

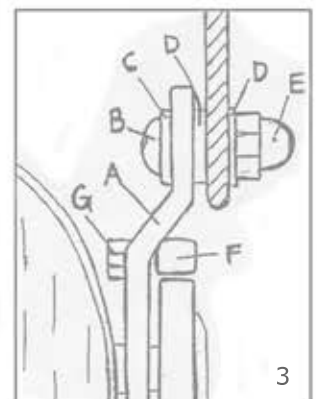

NOTE: ON DUCATI MONSTER 600/900 DON'T INSERT THE REGULATIONS SCREW "F", THE "C" WASHERS AND THE "G" NUT (PICTURE 2)